



Accessories bag contents:

	8 x	Nickel-plated TPS M6 x 16 CE screw	cod. 2.652941.06
	6 x	ABS cap mm 50 x 50 d. 946	cod. 2.552694.xx
	2 x	ABS cap mm 50 x 50 d. 946 F	cod. 2.552694.xx F
	4 x	White adhesive felt taps 35 x 35 x 3	cod. 2.653467.01
	6 x	Bumper D. 12x12.8 PF3 T. flat	cod. 2.553077.13
	1 x	Galvanized hex key n° 4	cod. 2.553061.02
	1 x	Galvanized hex key n° 5	cod. 2.5512481.02

Box contents:

	4 x	SLIM leg mm 726 d.946 complete with joint (2 x left / 2 x right)	cod. 3.2014185.xx
	1 x	Complete frame with extensions	

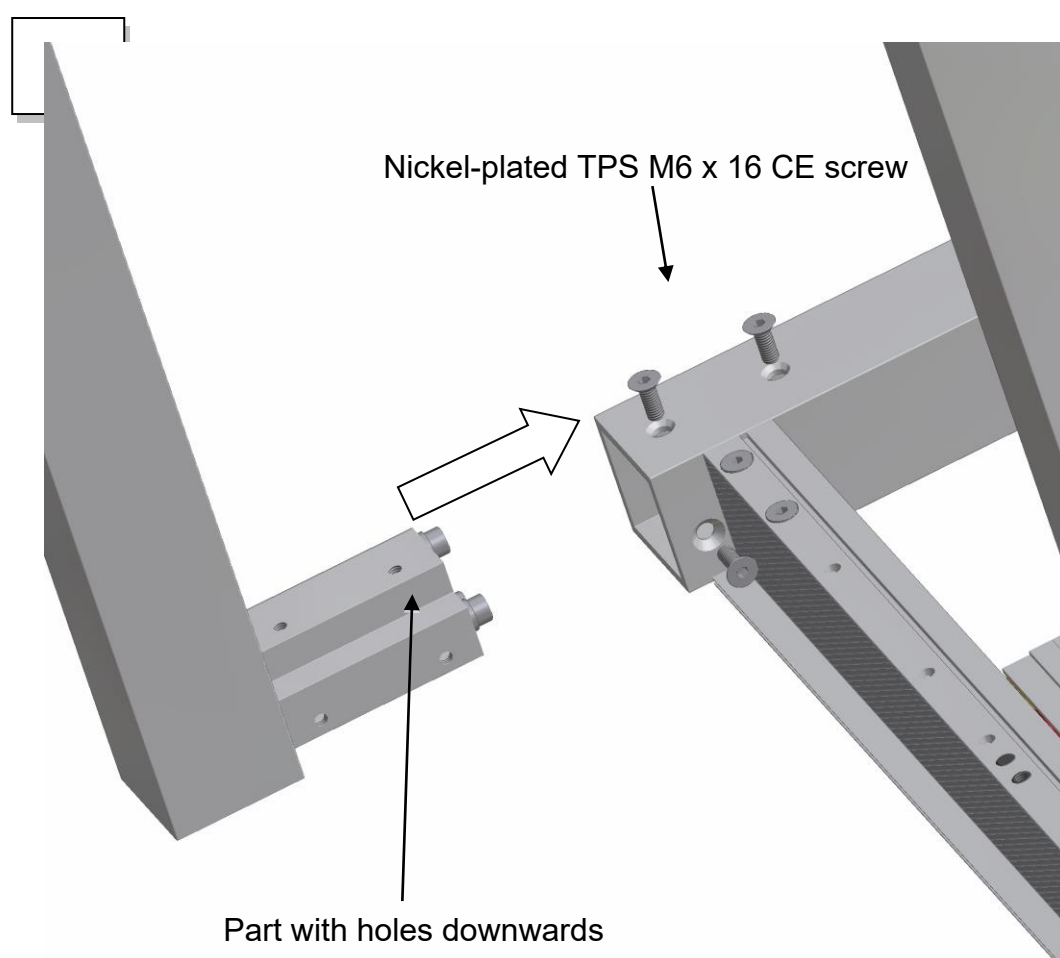

Align the leg with the pre-assembled joint on the crosspiece until the holes on the joint match up with those on the crosspiece. Then insert the 3 TPS M6 x 16 screws and screw them in. Repeat the same operation with the 4 legs of the table, paying attention to the correct positioning of the left and right legs.

